AIR TIGHT

# AT LOFT HATCH

Fitting Instructions

**PROVIDED**

40mm Steel Screws



Airtight Washers

**Futher Required Tools**

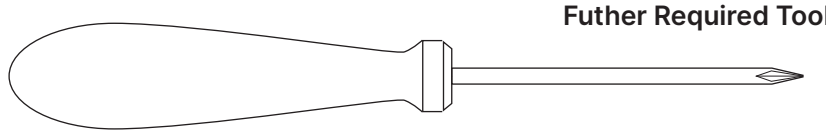

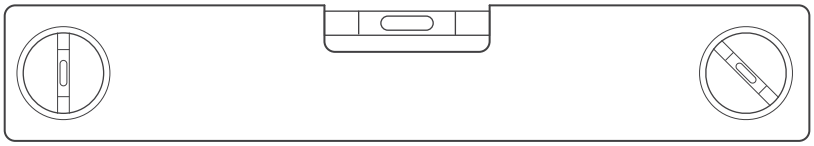

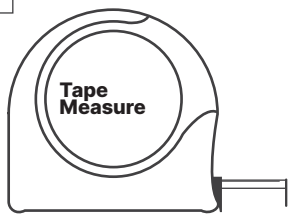


Packers (optional)
0.9 to 1.2mm Thick

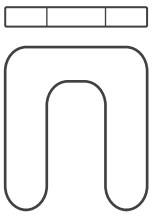

## 1

Trim out an opening to a minimum of 562 × 642mm (+5mm maximum if required).

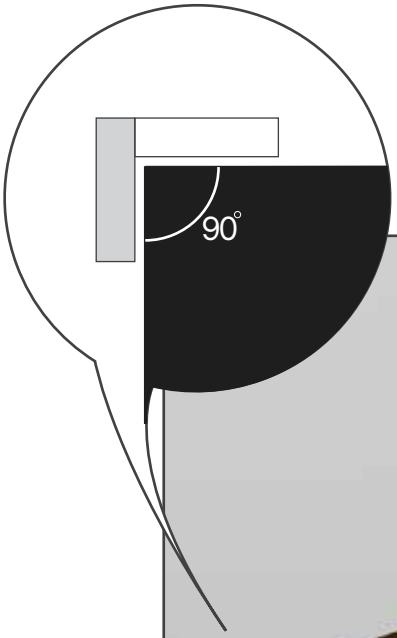

## 2

Open the hatch 90º and locate the frame into the prepared structural opening.

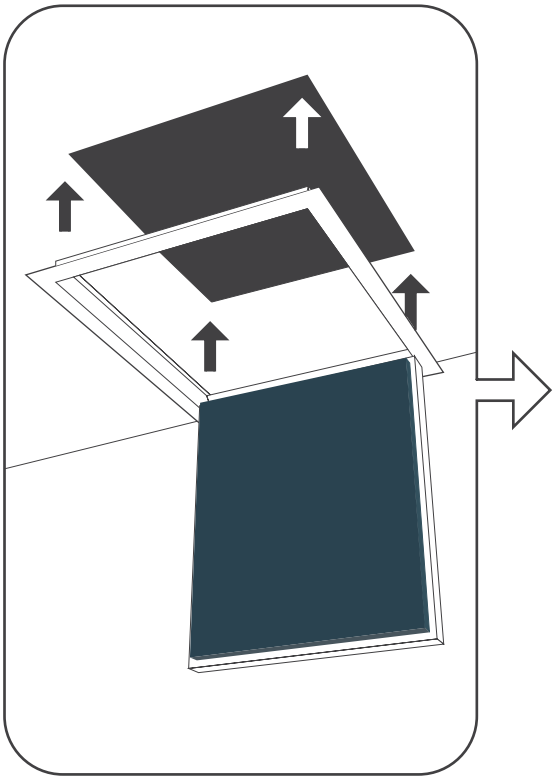

## 3

Push the frame tightly against the ceiling to engage the airtight seal between the frame and the ceiling.

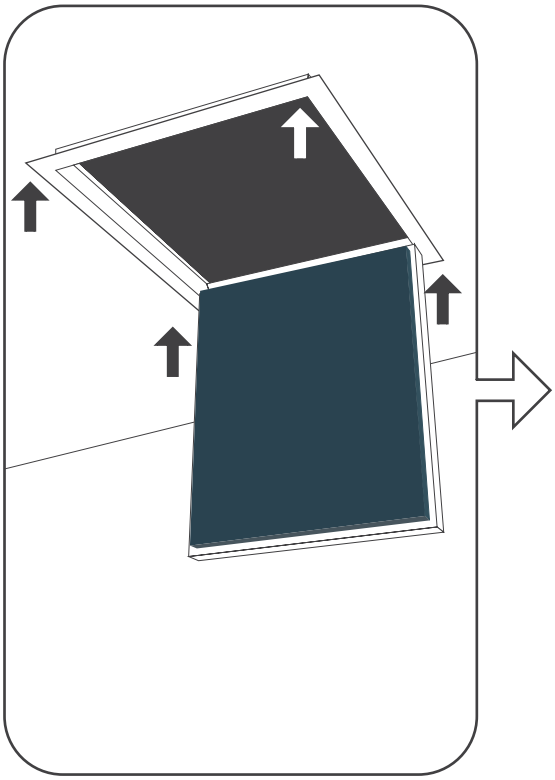

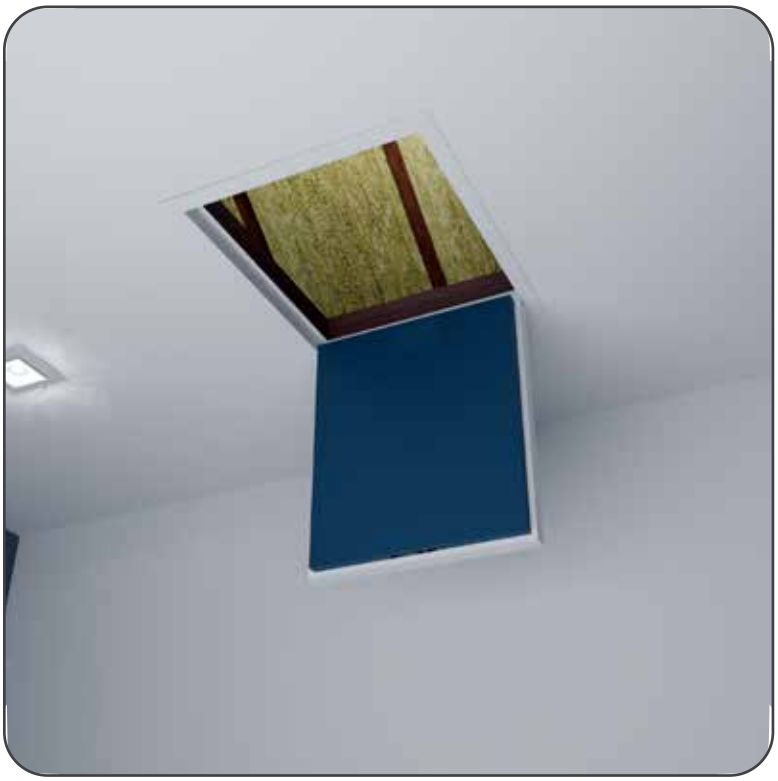

4

Place the rubber washers onto the 40mm fixing screws.

Fix the frame using all 6 screws through the pre-punched holes, found on the sides of the frame (do not fully tighten).

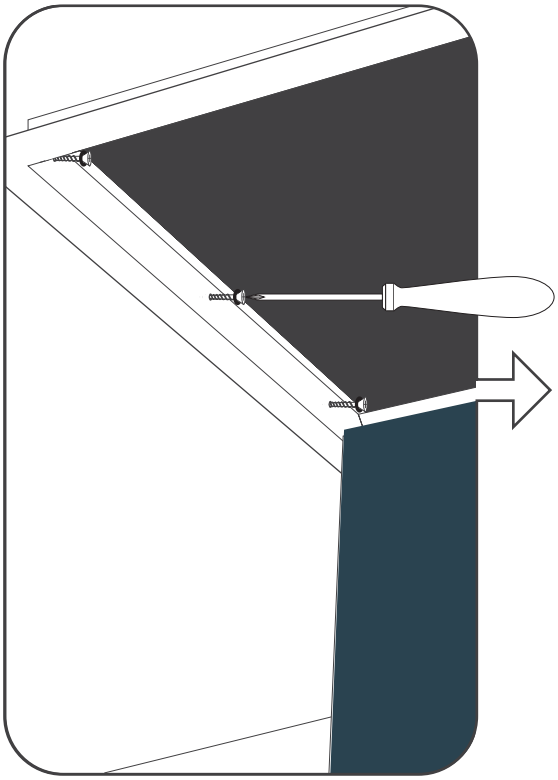

5

Before fully screwing into position, check the frame as square by ensuring the diagonals are equal

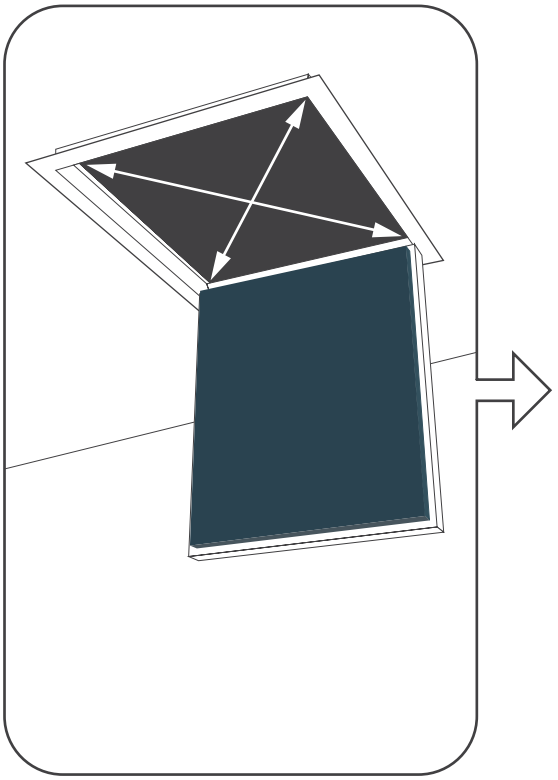

6

If necessary, add packers behind the frame fixings.

Do not overtighten the screws as this can distort the frame and break the air seal.

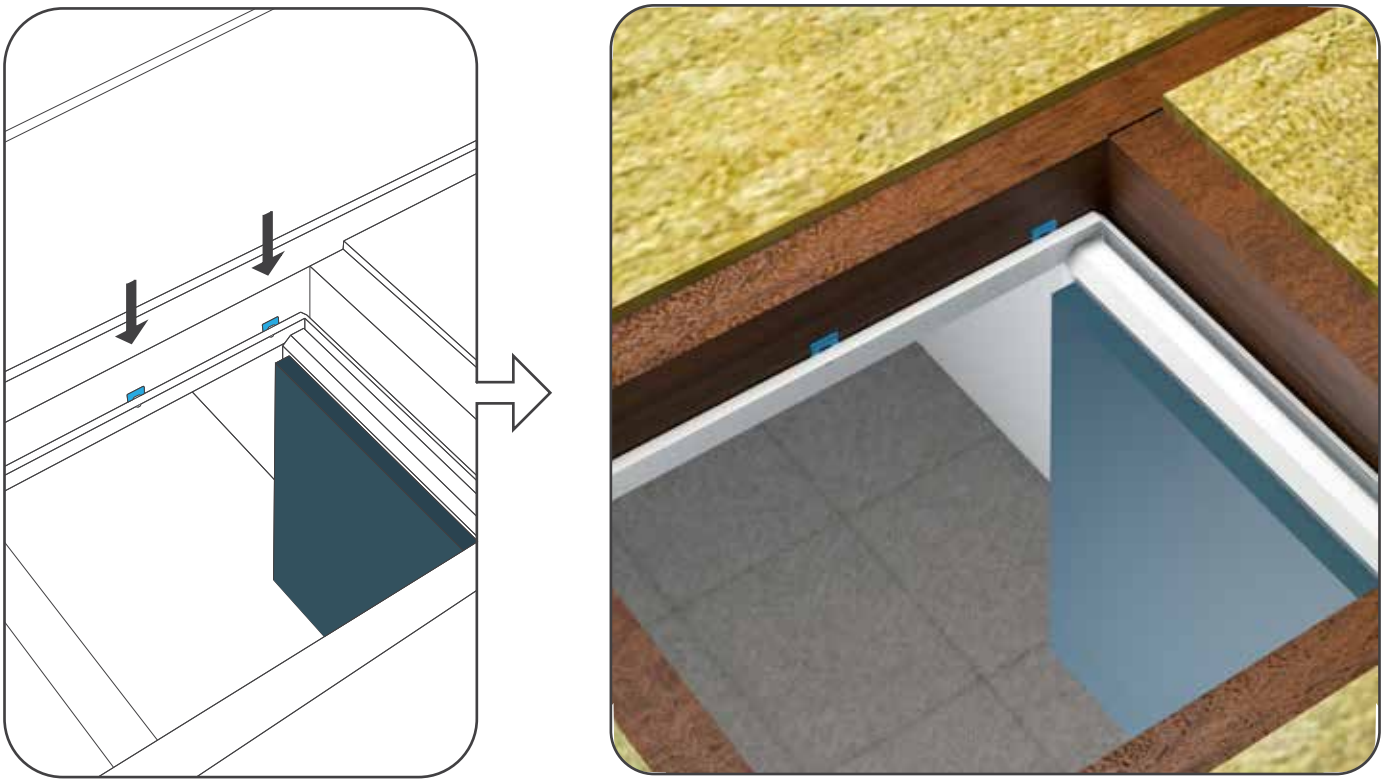

7
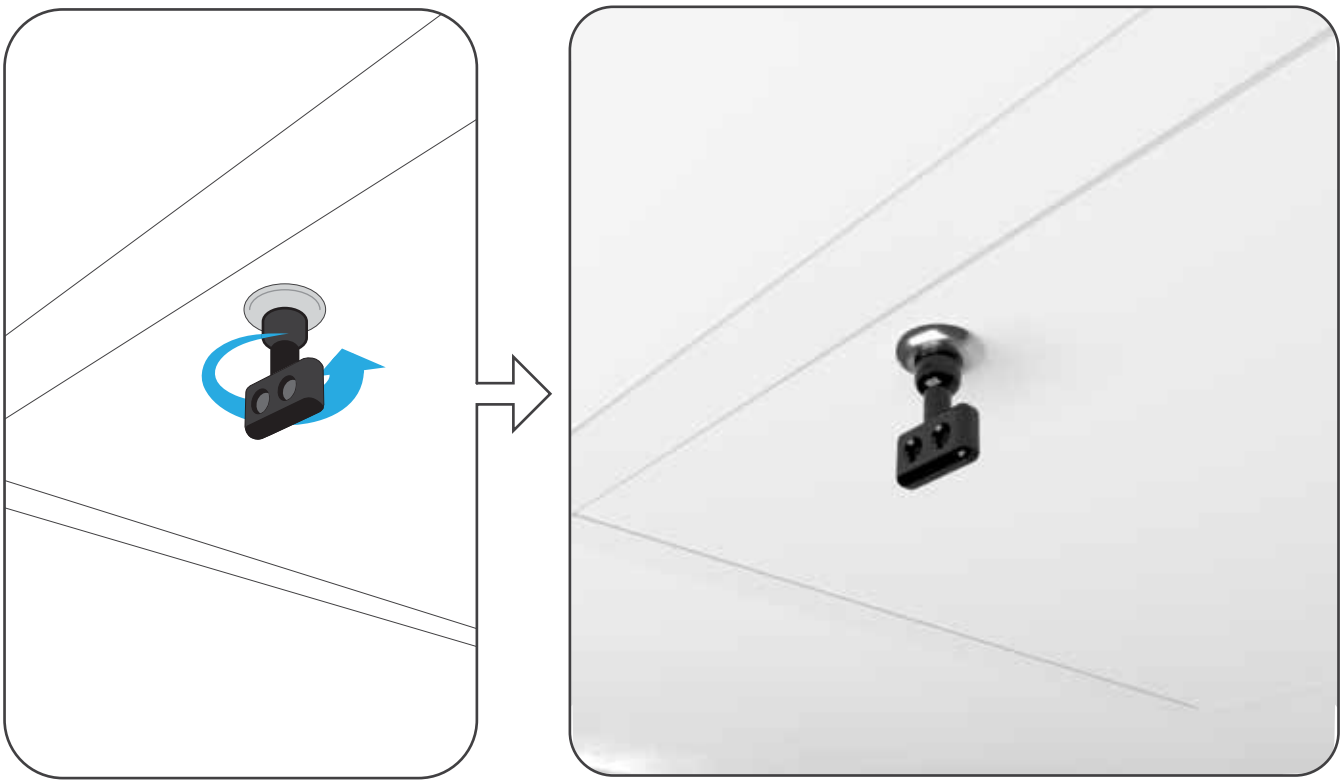
Close the hatch door and put the key into the lock.
Turn the key 90º to secure the door in the closed position.