HA Fitting Instructions

Required Tools

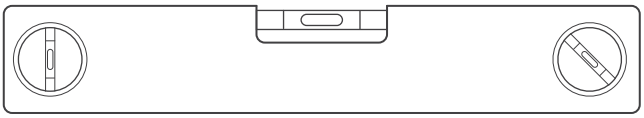

1

Ensure your structural opening is formed level, plumb, and square and 5mm larger than the internal frame size.

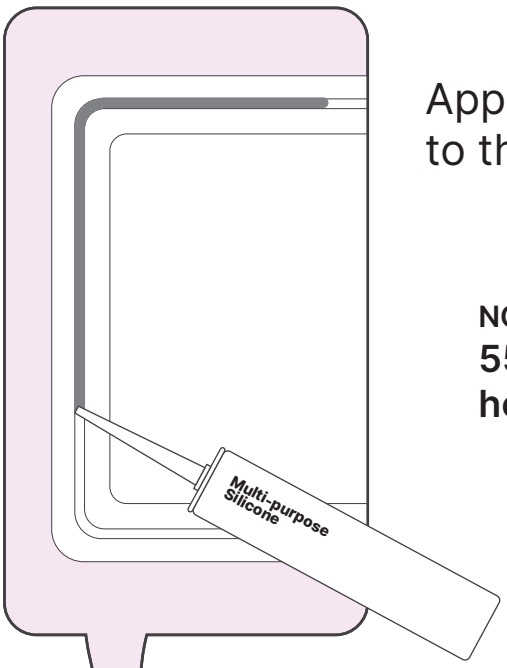

Apply a suitable silicone adhesive bead to the groove in the back of the frame.

NOTE:
550×550mm panels have preformed screw holes and must be screw fixed in place

3

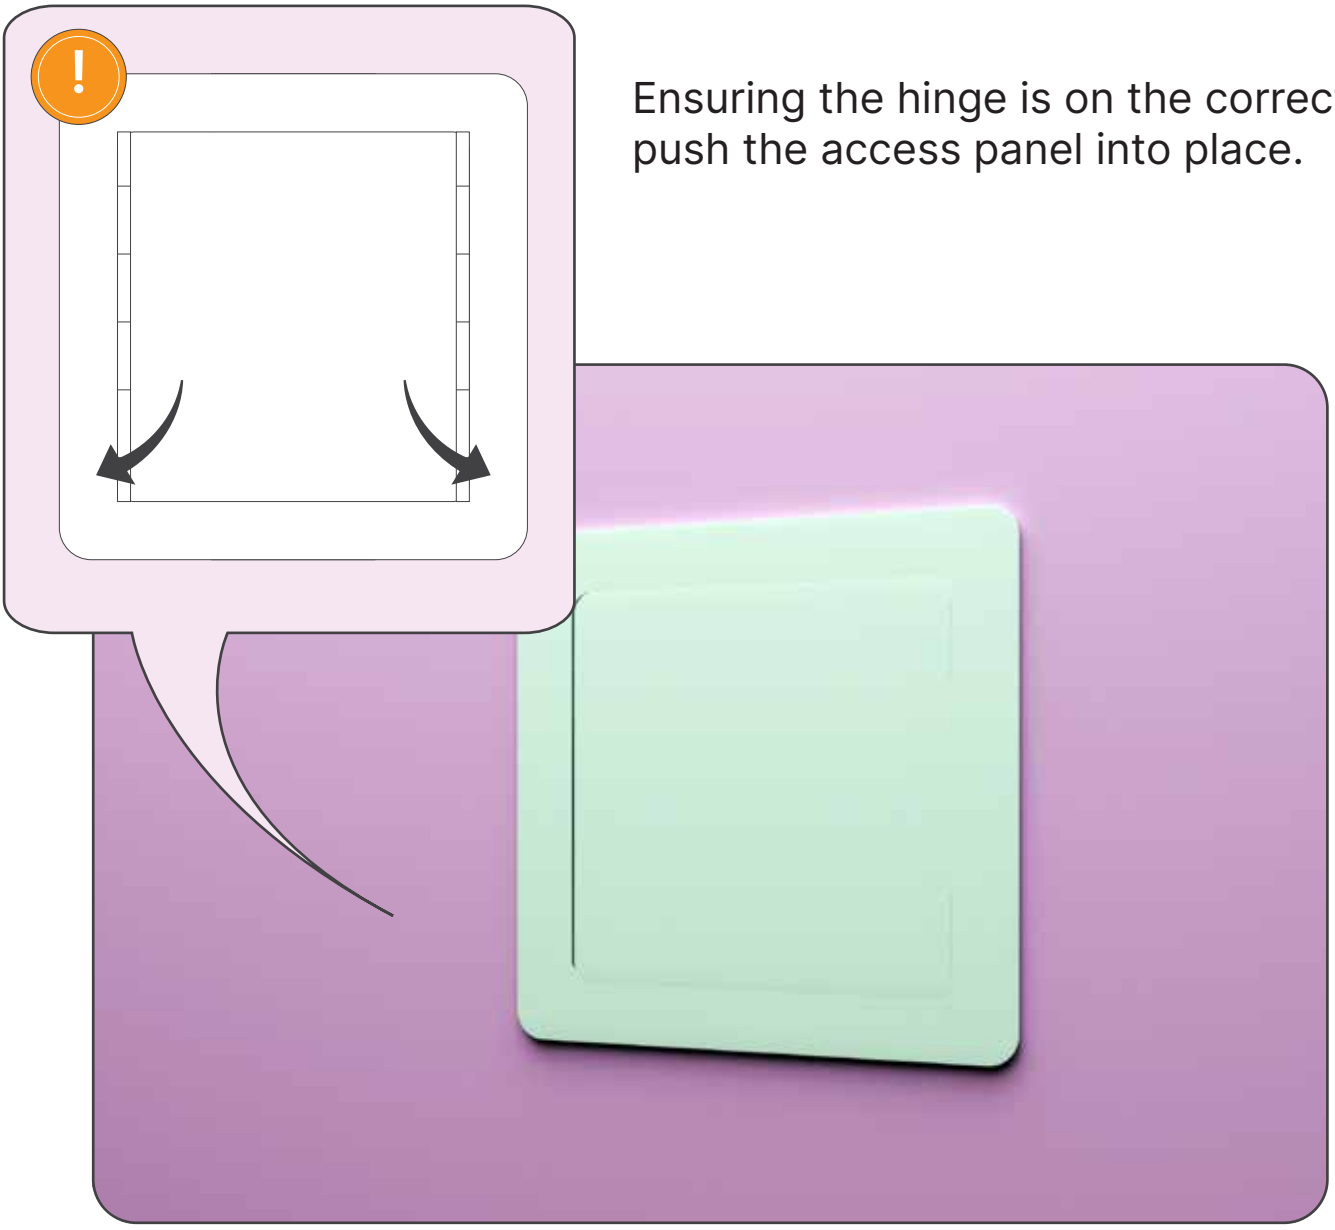

Ensuring the hinge is on the correct side, push the access panel into place.

4

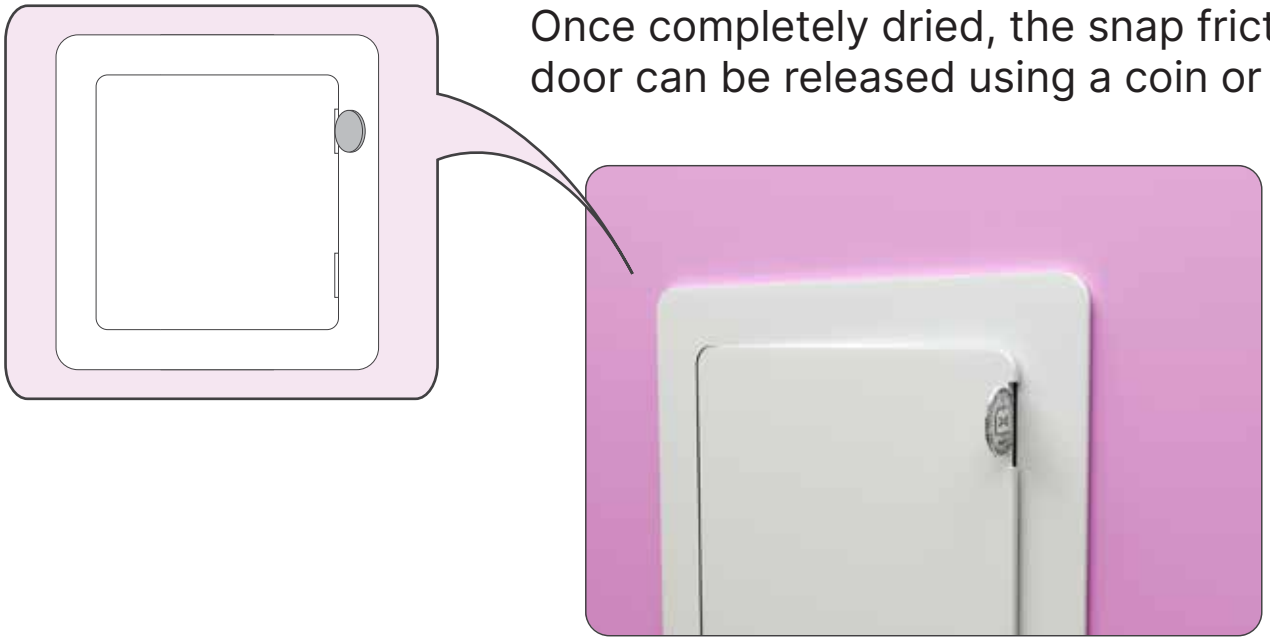

Once completely dried, the snap friction door can be released using a coin or similar.