# PFS-SH Fitting Instructions

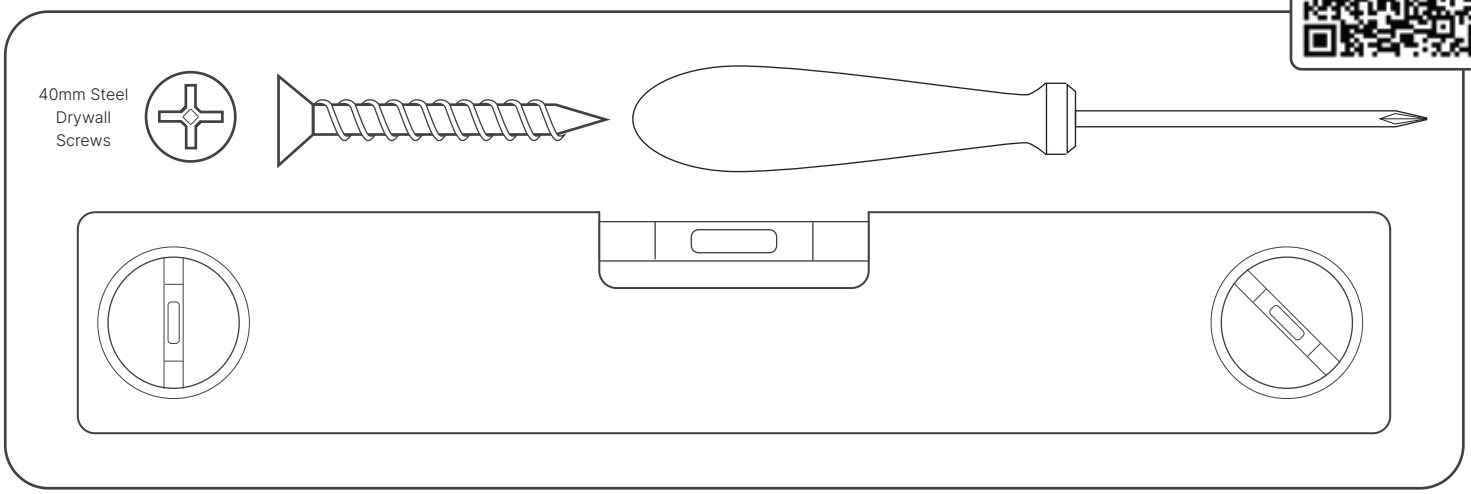


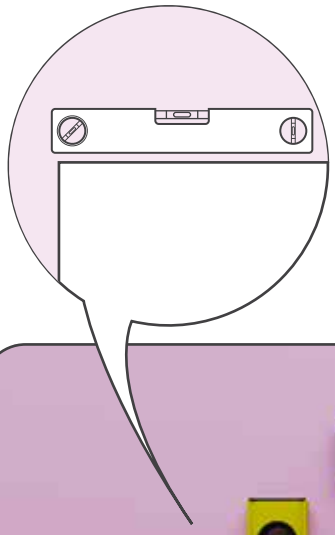

Ensure your structural opening is formed level, plumb, and square and 5mm larger than the internal frame size.

**1**

2

Unlock the door with the key provided, and insert the access panel frame into the opening.

3

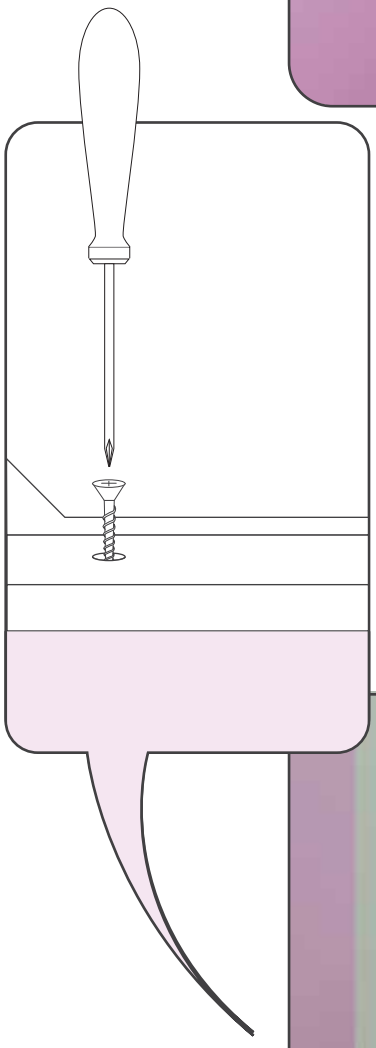

Fix the frame using 40mm steel drywall screws using all the pre-punched holes of the frame (do not over tighten).

Ensure there is an equal gap on all sides of the frame to guarantee it is installed squarely within the structural opening.