




BEADED FRAME

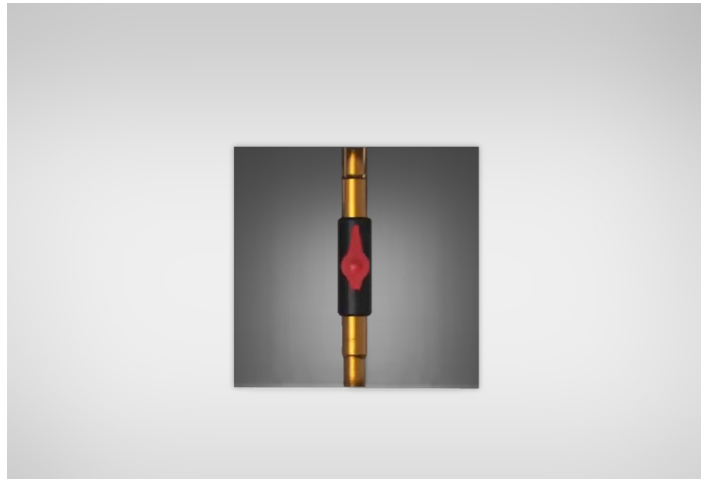

1: Pre-Prepare the hole in the Wall or Ceiling

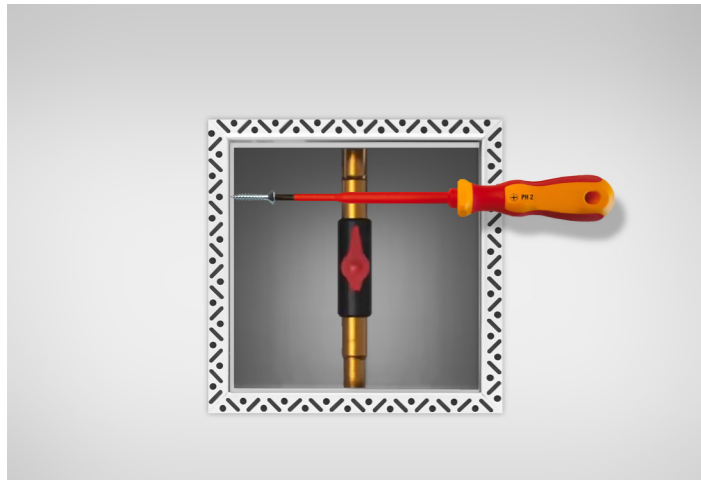


3: Using Countersunk screws, fix the frame to the joists through the fixing holes

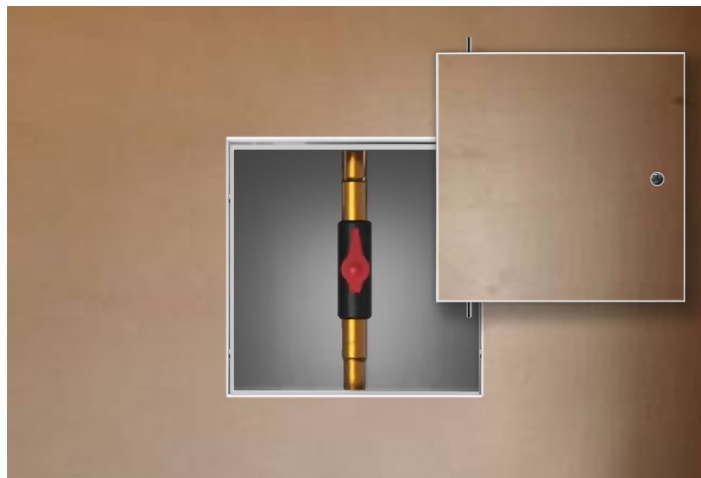


5: Plaster the Door and Wall separately. Once completely dry, the door can be placed back into the frame.



2: Remove the Panel Door (this will make plastering easier)

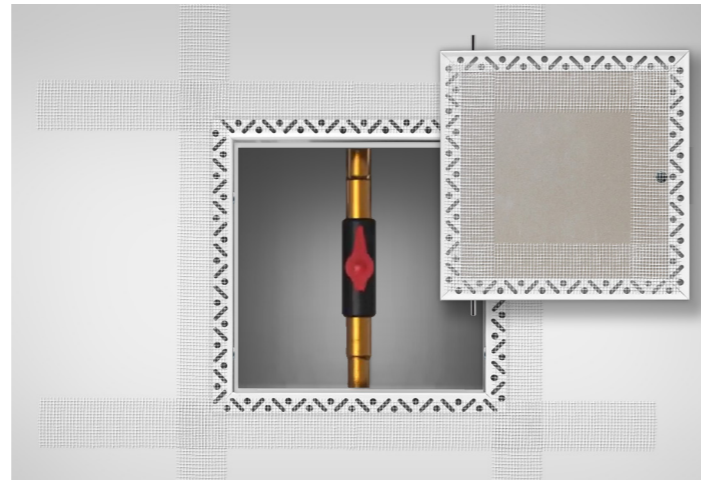


4: Using Scrim Tape, overlap the Panel frame and Plasterboard. Without Scrim Tape, the plaster may not adhere to the panels frame

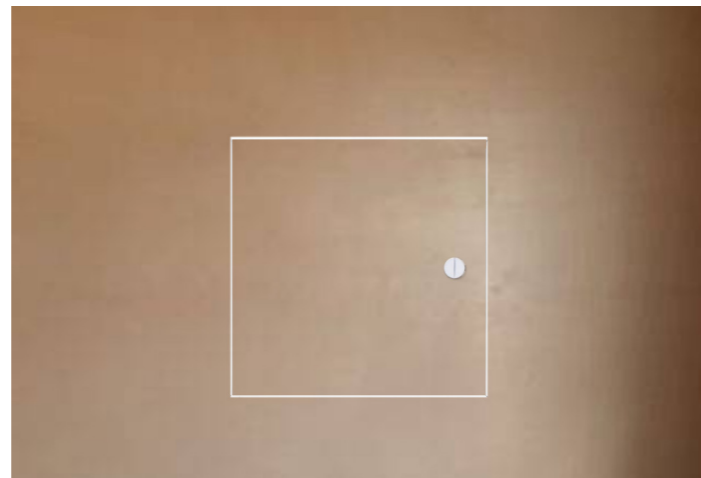

6: Project complete.


PICTURE FRAME

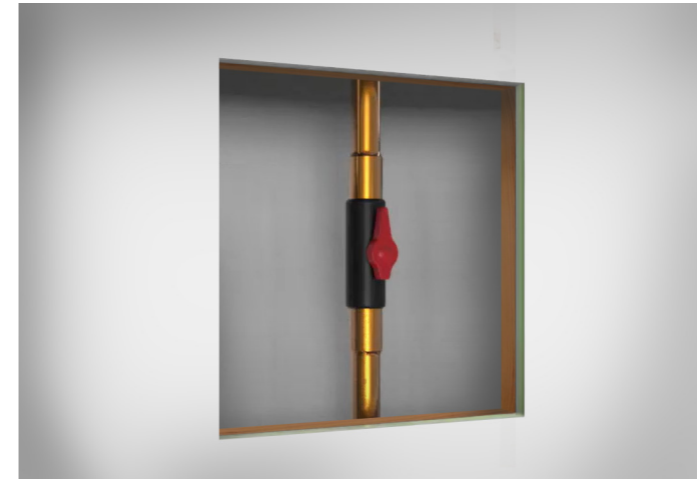

1: Pre-Prepare the hole in the Wall or Ceiling




3: Use Countersunk screws to assure fixings are flush inside the countersunk fixing points

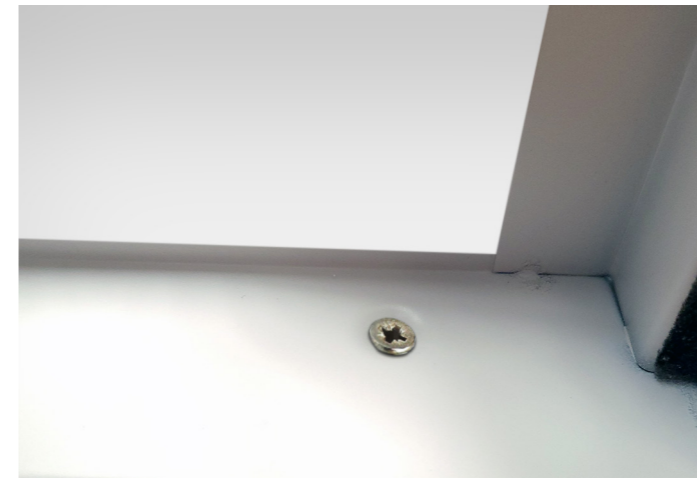


5: Pre-prepared fixing holes are dependant on the size of the Access Panel and are fixed at the users discretion.



2: Position the Panel into the hole, ensuring it is level, and sits flush.

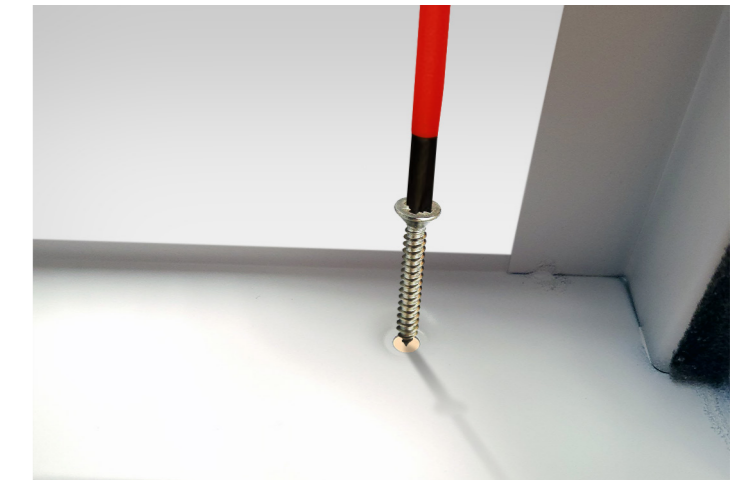

4: Open the door and fix the screws through the frame and secure to the wall or joists.

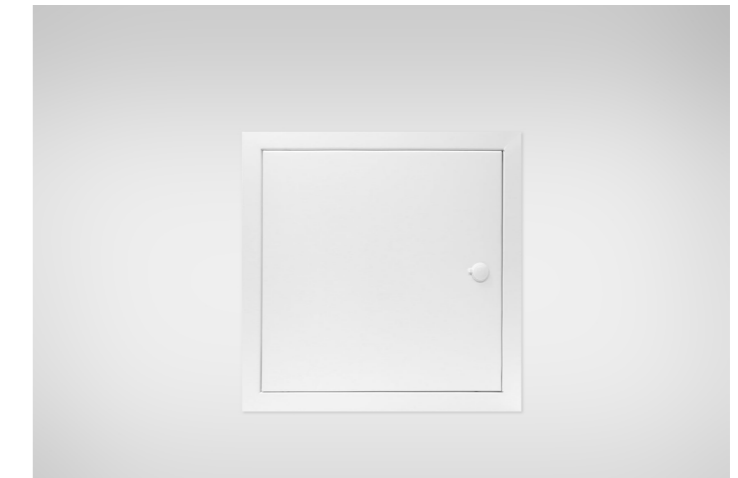

6: Project complete.